
 
 
 

 
 
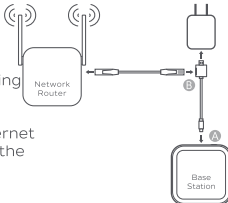 


Base Station

Installation Guide

SIDE-A:

What's in the box	Getting started	
 Kami Smart Security Base Station x1  Envelope x1  Ethernet Cable x1  USB-Ethernet Adapter x1  Wall Mount Base x1  Power Adapter x1  Screws and Anchors bag x1	<p>Place your Base Station near your network router in your home.</p> <p>Step 1 Search for "Kami Home" in the Apple App Store or Google Play App to download the Kami Home App.</p> <p>Step 2 Connect the Base Station and Power Adapter to your existing network router using the "USB-Ethernet Adapter" and "Ethernet Cable" as shown in the diagram.</p> 	<p>Step 3 Sign up or login to your Kami account using the Kami Home App. Watch the instruction video in Kami App on how to setup the Kami Smart Security Base Station.</p> <p>Step 4 After logging in to your Kami Home App, click the "+" sign to select your device or scan the QR product code. Now you can follow the guides on the App to finish the setup.</p> <p>Now your Base Station is ready to use!</p> <p>US V1.8</p>

SIDE-B:

Mounting Instructions	Specifications	
<p>Note: As shown in Step 2, the Kami Smart Security Base Station needs to be connected to Internet via your network router or switch.</p>  <p>We suggest installing the Kami Base Station close to your network router.</p> <p>If you would rather mount the Kami Base Station on your wall, use the supplied Wall mount base, screws and anchors.</p> 	<p>Operating Range: 0 – 45°C Audio: Built-in Mic/Speaker Wi-Fi: 2.4 GHz 802.11b/g/n Wireless Security: WEP/WPA/WPA2 Power Supply: DC 5V/1A (MicroUSB)</p> <p>Website: www.kamihome.com Support: +1 (888) 878-1584 E-mail: support@kamihome.zendesk.com https://kamihome.com/legal/fcc</p>	<p>kami Smart Security</p> <p>Base Station Installation Guide</p>

Entry Sensor

Installation Guide

SIDE-A:

What's in the box	Getting started	
<div data-bbox="156 696 223 804"></div> <div data-bbox="150 810 242 842">* Kami Entry Sensor x1</div> <div data-bbox="309 696 355 804"></div> <div data-bbox="290 810 373 842">Kami Magnet x1</div> <div data-bbox="426 696 533 804"></div> <div data-bbox="430 810 523 824">Envelope x1</div> <div data-bbox="156 916 228 983"></div> <div data-bbox="153 992 260 1005">3M Sticker x3</div> <div data-bbox="309 873 363 891"></div> <div data-bbox="290 898 386 913">Reset Pin x1</div> <div data-bbox="426 878 533 983"></div> <div data-bbox="426 992 541 1005">Screws Bag x1</div>	<div data-bbox="606 696 978 801"> <p>You will need to setup the Kami Smart Security Base Station before installing your Kami Entry Sensors. Please see the installation Guide of the Base Station on how to get started. Once the Base Station is setup, you can continue with Kami Entry Sensor installation.</p> </div> <div data-bbox="606 810 992 1005"> <p>Step 1 Please make sure your Kami Base Station is setup and connected to internet. You can refer to the Installation Guide of Kami Smart Security Base Station for details.</p> <p>Step 2 After logging into your Kami Home App, tap the "+" sign to select your device or scan the QR code on the sensor.</p> <p>Step 3 Insert the battery into the sensor .</p> </div>	<div data-bbox="1059 696 1431 763"> <p>Step 4 Power on the Base Station and put the sensor close to it. Now you can follow the guides on the App to finish the setup.</p> </div> <div data-bbox="1059 801 1286 1005"> <div data-bbox="1059 801 1152 815">Reset Hole</div> <div data-bbox="1160 846 1286 862">Status Indicator</div> <div data-bbox="1059 837 1190 972"></div> <div data-bbox="1206 902 1444 1005"> <p>*Note: The Kami Entry Sensor can only be paired when the status indicator is flashing. If it is not flashing, please use the reset pin to reset the sensor and try again.</p> <p>US v1.7</p> </div> </div>






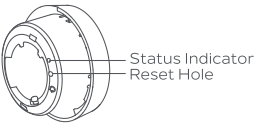 
SIDE-B:

Mounting Instructions	Specifications	
<p data-bbox="153 1341 491 1393">You can use either the included screws and anchors or double-sided tape to mount your Kami Entry Sensor.</p>  <p data-bbox="153 1653 536 1686">*Note: Do not mount on metal surfaces that may interfere with the magnetic sensor.</p>	<p data-bbox="608 1341 820 1375">Operating Range: 0°C - 45°C Battery: CR2450-600mAh</p> <p data-bbox="608 1619 932 1686">Website: www.kamihome.com Support: +1 (888) 878-1584 E-mail: support@kamihome.zendesk.com https://kamihome.com/legal/fcc</p>	<div data-bbox="1327 1305 1444 1348">kami</div> <div data-bbox="1209 1632 1444 1688">Entry Sensor Installation Guide</div>

Motion Sensor

Installation Guide

SIDE-A:

What's in the box	Getting started	
 <p>Kami Motion Sensor x1</p>  <p>3M Sticker x1</p>  <p>Reset Pin x1</p>  <p>Envelope x1</p>  <p>Battery x1</p>	<p>You will need to setup the Kami Smart Security Base Station before using the Kami Motion Sensor. Please refer to the Installation Guide of your Base Station on how to get started. Once the Base Station is set up you can continue with your Motion Sensor installation.</p> <p>Step 1 Please make sure the Base Station is setup and connected to Internet. You can read the Installation Guide of Kami Smart Security Base Station for details.</p> <p>Step 2 After logging into your Kami Home App, tap the "+" sign to select your device or scan the QR code on the sensor.</p> <p>Step 3 Insert the battery into your Kami Motion Sensor.</p>	<p>Step 4 Power on the Base Station and put the Kami Motion Sensor close to it. Now you can follow the guides on the App to finish the setup.</p> <p>*Note: The Kami Motion Sensor can only be paired when the status indicator is flashing. If it is not flashing, please use the reset pin to reset the sensor and try again.</p>  <p>Status Indicator Reset Hole</p> <p>US V1.7</p>






 
SIDE-B:

Mounting Instructions	Specifications	
<p>Choose an appropriate location and attach your Kami Motion Sensor to the wall or furniture with the supplied double-sided tape.</p>  <p>*Notice:</p>  <p>Effective detection area-side view</p>  <p>Effective detection area-top view</p>	<p>Operating Range: 0°C - 45°C Battery: CR2450-600mAh</p> <p>Website: www.kamihome.com Support: +1 (888) 878-1584 E-mail: support@kamihome.zendesk.com https://kamihome.com/legal/fcc</p>	 <p>Motion Sensor Installation Guide</p>

Wire-Free Camera

Installation Guide

SIDE-A:

What's in the box	Getting started	
 <p>Kami Wire-Free Camera x1</p>  <p>Magnetic Mount Base x1</p>  <p>Envelope x1</p>  <p>Rechargeable Battery x1</p>  <p>Wall Mount Base x1</p>  <p>Screws Bag x1</p>	<p>You will need to setup the Kami Smart Security Base Station before using your Kami Wire-Free Camera. Please see the Installation Guide of the Base Station for instructions on how to get started. Once your Kami Smart Security Base Station is set up you can continue with your camera installation.</p> <p>Step 1 Please make sure the Kami Smart Security Base Station is setup, added to your account on Kami Home App and connected to Internet via your home network router or switch. You can find setup details in the Kami Base Station Installation Guide.</p> <p>Step 2 After logging into your Kami Home App, tap the</p>	<p>“+” sign to select the Kami Wire-Free Camera.</p> <p>Step 3 Insert the battery into the camera and follow the guide in the app. You will hear the voice prompt “Welcome to the Kami Wire-Free Camera” shortly.</p> <p>Step 4 Power on the Base Station and put the camera close to it (within 12 inches). Now you can follow the guides on the App to finish the setup.</p> <p>Your Kami Wire-Free Camera is now ready to use.</p> <p>US V1.9</p>

SIDE-B:

Mounting Instructions	Specifications	
<p>Choose an appropriate spot and use the wall anchors and screws to mount the Magnetic Mount Base to a wall or ceiling.</p>   <p>Since the base is magnetic you can choose to stick it to metal furniture or appliances like a refrigerator or steel cabinet. No screws or drilling required.</p> 	<p>Operating Range: -10 – 50°C Maximum Resolution: 1920x1080 Lens: 140° Wide Angle Audio: Built-in Mic/Speaker, full duplex Video Compression: H.264 High Profile Enhancement: 3D Noise Reduction Power Consumption: 2.5W (Max) Wi-Fi: 2.4GHz, 802.11 bgn Wireless Security: WEP/WPA/WPA2 Power Supply: DC 5V/1A (MicroUSB) Battery Capacity: 1600mAh / 11.84Wh Weather-Resistant: IP65</p> <p>Website: www.kamihome.com Support: +1 (888) 878-1584 E-mail: support@kamihome.zendesk.com https://kamihome.com/legal/fcc</p>	 <p>Wire-Free Camera Installation Guide</p>